

Model:AS806

## Anemometer Instruction manual



- A.Function:
  1) Wind speed & temperature measurement.
  2) Wind chill indicaton.
  3) Temperature display in Celsius or Fahrenheit.
  4) Different wind speed measurement unit
  5) Measure wind speed in: Current/Average/ Max .
  6) Low battery warning
  7) LCD backlight .
- 8) Auto / Manual off.

## **B.Operation**

- 1) Put battery into battery compartment, LCD will blink all display for a second.
- Recover battery door, push "MODE" in 1 second to turn on the unit. LCD will display wind speed, temperature and battery icon. LCD backlight will lasting for 12 seconds.
- 3) Setting different wind measurement:
  - Push "MODE" for 3 seconds until "m/s" starts to blink. Push "SET" to select desired measurement unit. To confirm the desired measurement unit by push "MODE".
- Digit symbol:m/s meter per second; km/hr kilometer per hour; ft/min feet per minute; knots nautical mile per hour;mph mile per hour; Cu Current wind speed, MAX max wind speed, average wind speed.
- 4)°C/°F switch option:Press the little conceal key on the rear cabinet to select different temperature unit.
- 5) Press any key will active LCD backlight for 12 seconds.
- 6) Measurement: when the wind vane ( impeller ) turns,
- LCD will instant display wind speed and temperature. When temperature below 0°C, wind chill symbol will shown on the LCD.
- 7) Push MODE+SET to turn off the unit.
- 8) Build in 14 minutes auto off
  - Remark: Temperature switch key (  $^{\circ}C/^{\circ}F$  ) conceal in the rear cabinet, please use a little pushpin to press the key for  $^{\circ}C/^{\circ}F$  conversion.

## C.Specifications

Wind s	pee	d range	e					
Unit	Range		Resolution		Threshold		Accuracy	
m/s	0~45		0.1		0.1			
ft/min	0~5860		19		39	39		
knots	0~55		0.2		0.1		±5%	
km/hr	0~90		0.3		0.3			
mph	(	)~65	0.2		0.2			
Tempe	ratu	ire rang	<u>ge</u>					
Unit		Range		Resolution			Accuracy	
°C		-10°C~+45°C		0.2			±2°C	
°F		14°F~113°F		0.36			$\pm 3.6^{\circ} F$	
Battery				9V Battery				
Thermometer				NTC thermometer				
Operating temperature				-10°C~+45°C(-14°F~113°F)				
Operating humidity				≤90% RH				
Store temperature				-40°C~+60°C(-40°F~140°F)				
Current consumption				About 3mA				
Weight				192g (including battery and langyard)				



